





instruction manual eredeti használati utasítás návod na použitie manual de utilizare uputstvo za upotrebu návod k použití uputa za uporabu



EN -Safety and maintenance / H - Biztonság és karbantartás / SK - Bezpečnosť a údržba / RO - Siguranţă şi întreţinere / SRB-MNE - Bezbednost i održavanje / CZ - Bezpečnost a údržba / HR-BIH - Sigurnost i održavanje	2 - 13
EN -Functions / H - Funkciók / SK - Funkcie / RO - Funcţii / SRB-MNE - Funkcije / CZ - Funkce / HR-BIH - Funkcije	14 - 19



EN -Safety and maintenance / H - Biztonság és karbantartás / SK - Bezpečnosť a údržba / RO - Siguranţă şi întreţinere / SRB-MNE - Bezbednost i održavanje / CZ - Bezpečnost a údržba / HR-BIH - Sigurnost i održavanje



BS 10/A

IMPORTANT SAFETY INSTRUCTIONS READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USE AND RETAIN IT FOR LATER REFERENCE!

WARNINGS

 Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language. • This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance by a person responsible for their safety and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children from the age of 8 may only clean or perform user maintenance on the appliance under supervision. Children below the age of 8 years should be kept away from the appliance, and its power cable. • Installing car-hifi devices requires important technical knowledge, and experience, which we do not have the means to detail in this manual. If necessary contact a specialist, so you do not damage the device, or the vehicle! Proper installation is a requirement for reliable operation. • Place it safely – and if necessary fix – the device in the trunk of the car! Check so moving objects (e.g.: luggage) does not come into contact with the subwoofer! The subwoofer can be easily damaged, do not touch the subwoofers cone, or rubber edge with hand or tools! • Improper installation, or usage can lead to the termination of the warranty. • Make sure the connections are correct! Improper connection can lead to malfunction. The poles of the speaker cannot touch each other, or the grounding of the car (its negative potential)! • Immediately shut down the device, if you notice any error, and contact a specialist! Many irregularities (no sound, bad odor, smoke, foreign object in the device) can be noticed easily. • Protect from dust, humidity, liquids, heat, frost, and shock, and from direct heat or sunshine! • Protect it from splashing water, and do not place objects filled with liquids e.g.: cups on top of it! • Open flame sources, like a burning candle, cannot be placed on be device! • Do not take it apart, or modify the device, because it can cause fire, accident or electric shock! • Do not do cable connecting when the device is operational Never shut down the system when the volume is fully turned up! The usually heard cracking or other sound waves can immediately ruin the speaker. • In order to protect the audio system from external noises, keep the audio cables separately from power- or other cables! • The speakers contain magnets, so do not place items near them which are susceptible to them (e.g.: credit card, cassette tape, compass...). • Because of continuous development technical data and design can change without prior notice. • We do not take responsibility for any printing errors, and are sorry of any occurs.



Caution: Risk of electric shock!

Do not attempt to disassemble or modify the unit or its accessories. In case any part is damaged, immediately power off the unit and seek the assistance of a specialist.



In the event that the power cable should become damaged, it should only be replaced by the manufacturer, its service facility or similarly qualified personnel.

CLEANING

Use a soft, dry cloth and brush for regular cleaning. With a slightly moist cloth clean the plastic parts of the device. Do not use aggressive cleaners! DO not let liquids come into contact with the inside of the device, or its connectors!

TROUBLESHOOTING

Upon noticing any error turn off the device! Later try turning it back on. If the problem persists, look through the following notes. This guide can help in identifying the problem, if the device is connected correctly beside it. If necessary contact a specialist!

Malfunction

The Sound cabinet has no sound

- The amplifier does not get supply voltage.
- The access is not properly connected to the cars sound system.

The volume or sound quality is not appropriate

• The audio level connected to the access is either too high or too low.

Possible solution

- Check the amplifiers supply voltage, if it has supply voltage, and its right polarity.
- Check the connection cable for the possibility of tears, short circuit, and if it is correctly connected.
- Check the connection cables connection, the quality of the signal source, and the strength of the signal.
- If necessary increase or decrease the inbound signal level.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



DISPOSAL

Waste equipment must be collected and disposed separately from household waste because it may contain components hazardous to the environment or health. Used or waste equipment may be dropped off free of charge at the point of sale, or at any distributor which sells equipment of identical nature and function. Dispose of the product at a facility specializing in the collection of electronic waste. By doing so, you will protect the environment as well as the health of others and yourself. If you have any questions, contact the local waste management organization. We shall undertake the tasks pertinent to the manufacturer as prescribed in the relevant regulations and shall bear any associated costs arising.